


Cable length should be as short as possible

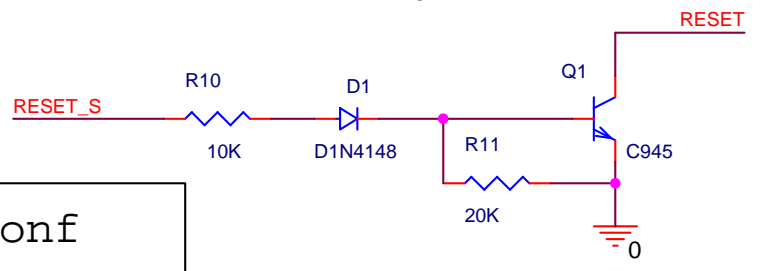

```

ADD THIS TO avrdude.conf
# SIPROG Inverted programmer
# reset=!txd sck=rts mosi=dtr miso=cts

programmer
  id = "siprogn";
  desc = "Lancos SI-Prog <http://www.lancos.com/siprogsch.html>";
  type = serbb;
  reset = ~3;
  sck = ~7;
  mosi = ~4;
  miso = ~8;
;

OR USE PONY PROG, SIPROG,
WITH ALL PINS INVERTED
  
```

Title		
Com Port Programmer		
Size	Document Number	Rev
A	01	01
Date:	Monday, July 14, 2008	Sheet 1 of 3